
## Protos 3 - 2 Sector Spiral - Batch set-up Quick Guide



Select Spiral

Select

Spiral Plate

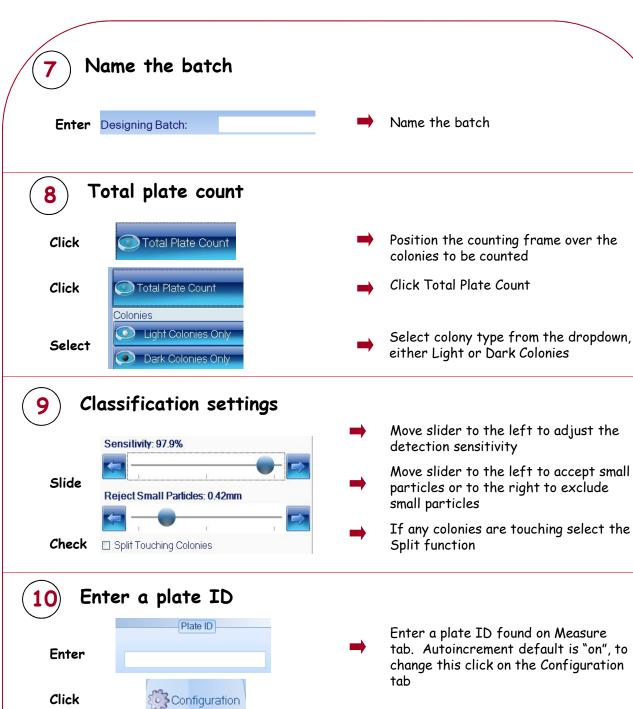

Enter a plate ID found on Measure tab. Autoincrement default is "on", to change this click on the Configuration

Accept batch

Click



Accept batch

Protos 3 is now ready to make the first measurement

CONTACT SYNBIOSIS: EUROPE:

Email: support@synbiosis.com

www.synbiosis.com Protos3255QG

